

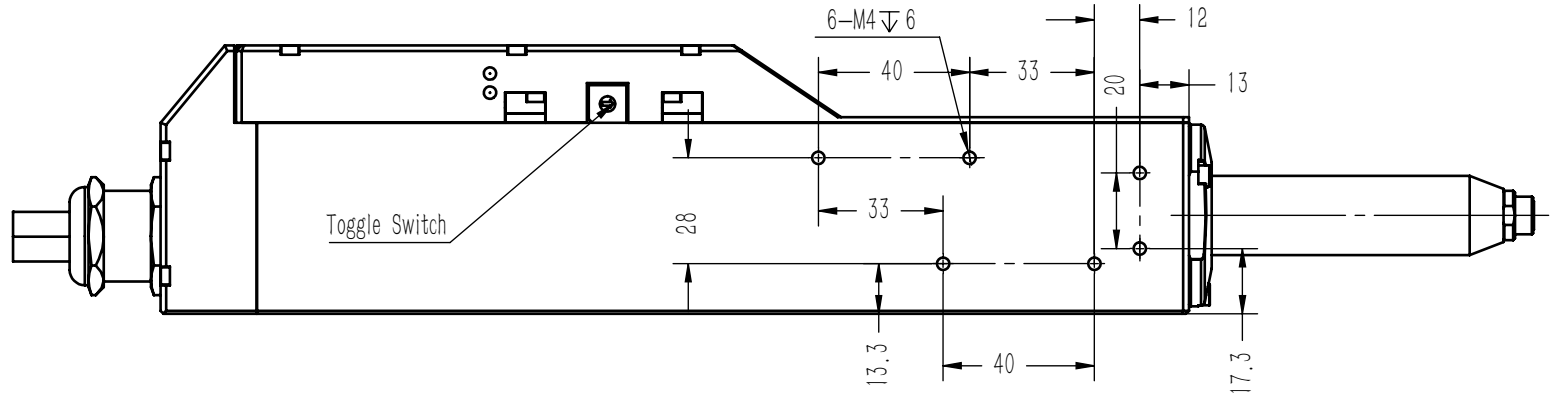


Unit: mm

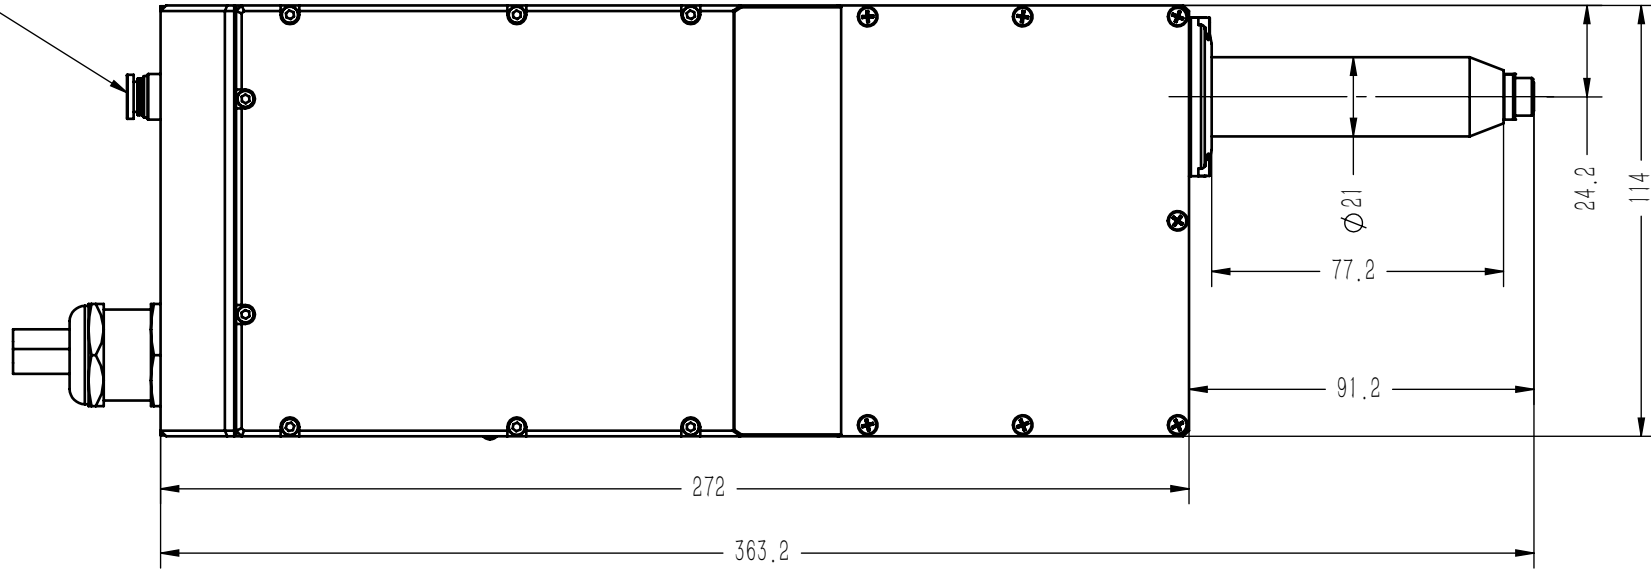

Negative Pressure Rivet Removal

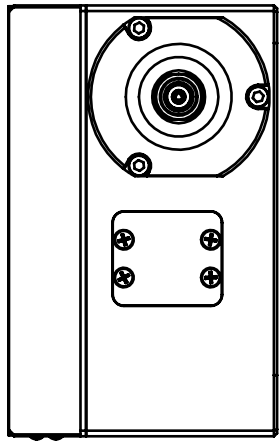

Installation Instructions:

1. When fixing the main body, please use all the screws on the same installation surface.
2. When tightening the bolts, do not exceed the depth of the threaded hole.

Integrated Design

